


Dette er en kort beskrivelse på hvordan man laster ned oppgraderingen fra internett og hvordan man så installerer det:

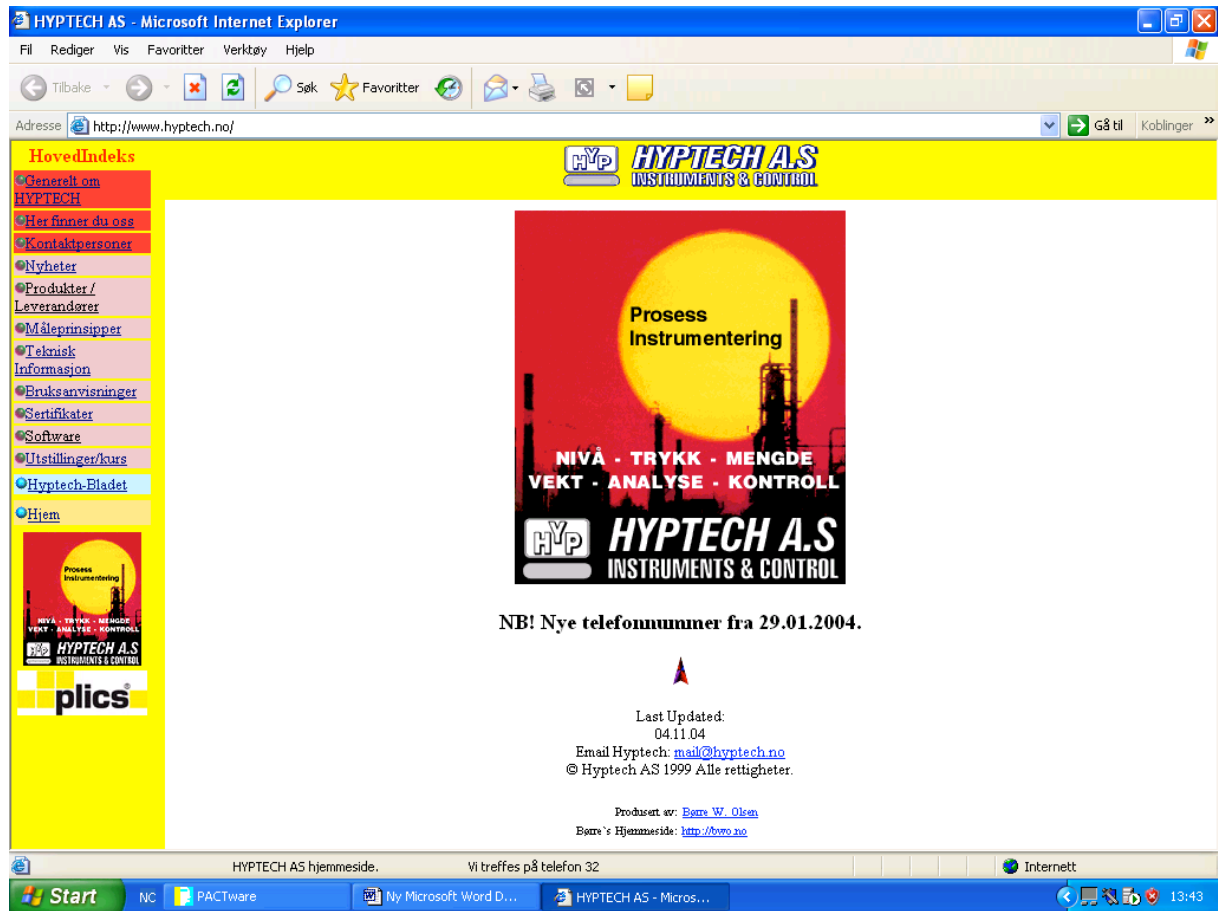

Gå til vår hjemmeside: <http://www.hyptech.no/>


Gå inn på "Software"

Gå inn på "Vega"

Gå så inn på linken til Vega: <http://www.vega.com/inh/e/de/sw.htm>

Gå så inn på " **plics**® sensors/instruments"

Du får da opp følgende bilde

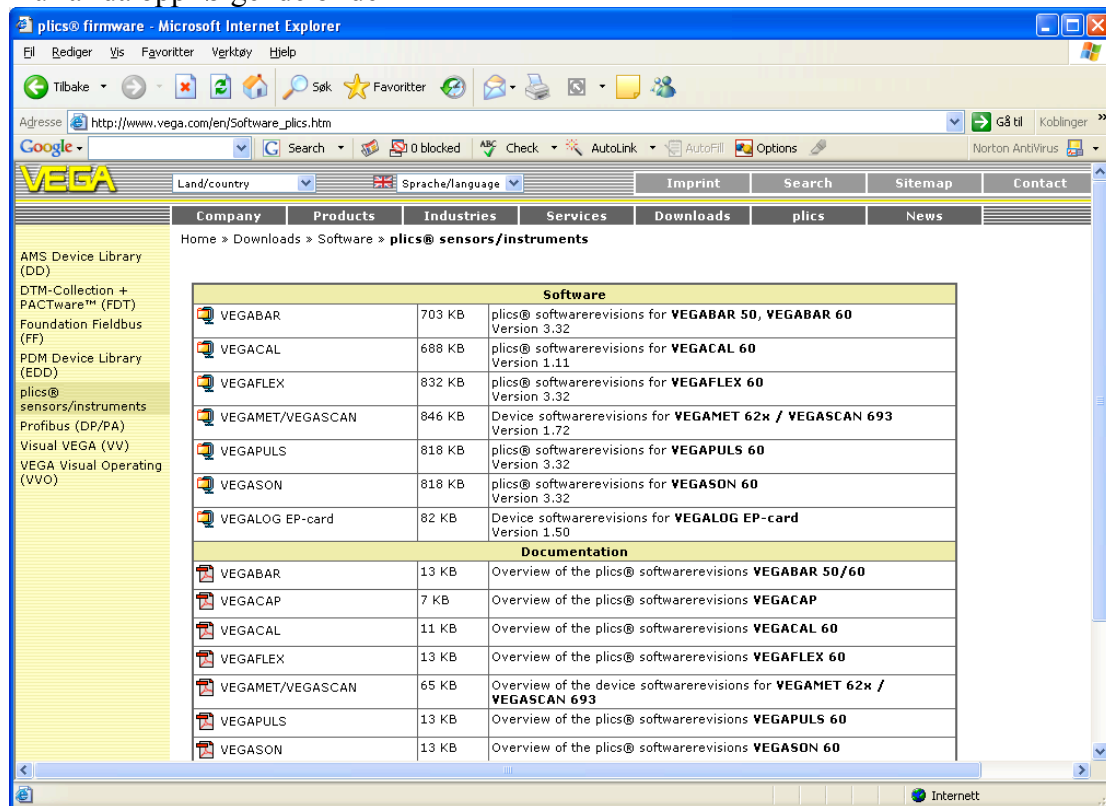


Last ned filen for sensoren du skal oppgradere.


Vær oppmerksom på at alle filene du laster ned er ZIP-versjoner, og må derfor først pakkes ut.

Start Pactware som vanlig.


Velg connect med sensoren som vanlig, men IKKE dobbeltklikk på sensoren slik at du blir online og kan forandre på innstillinger. Høyreklikk på sensor å gå til følgende bilde og velg ”firmware update”:

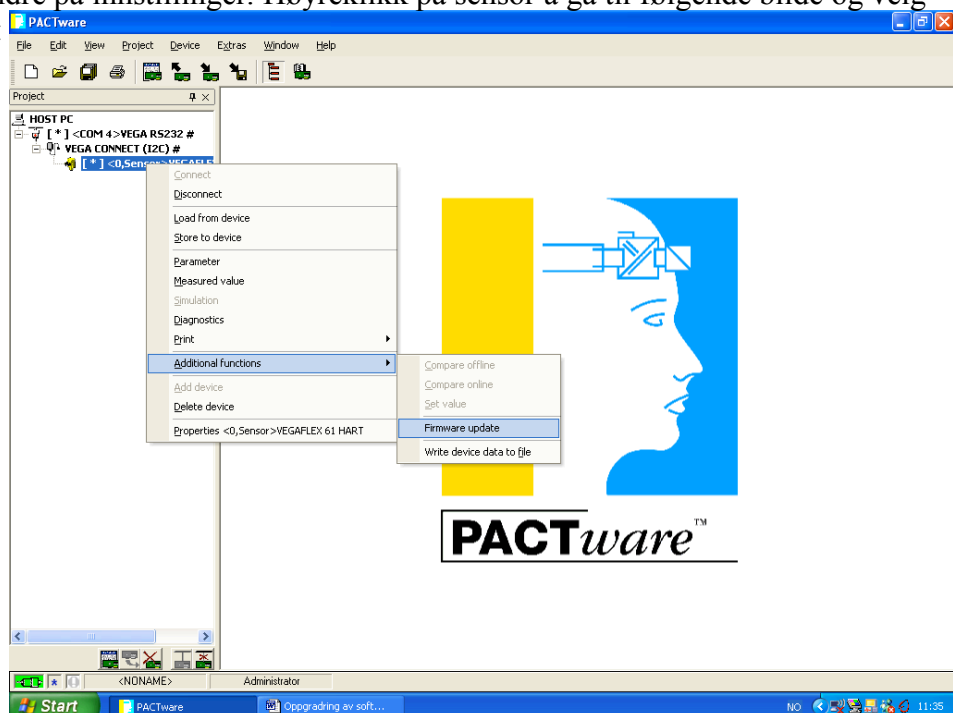

Deretter velger du "update software":

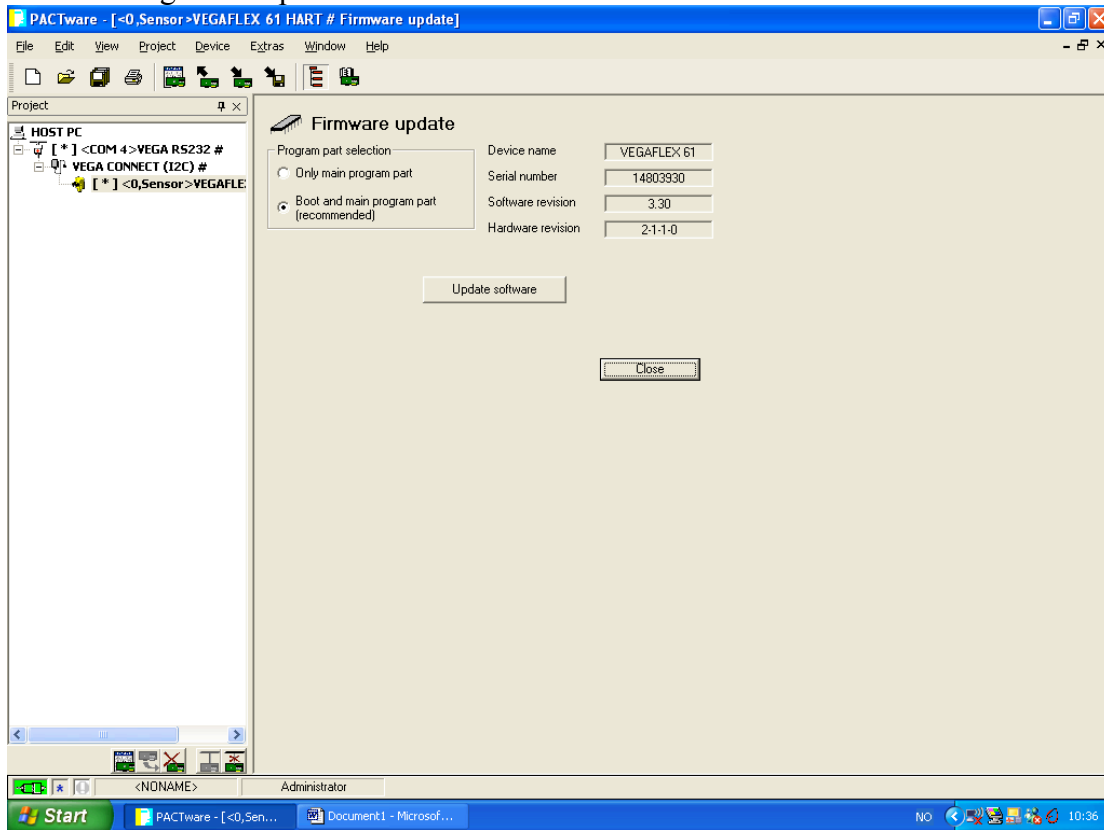


Velg oppgraderings filen:

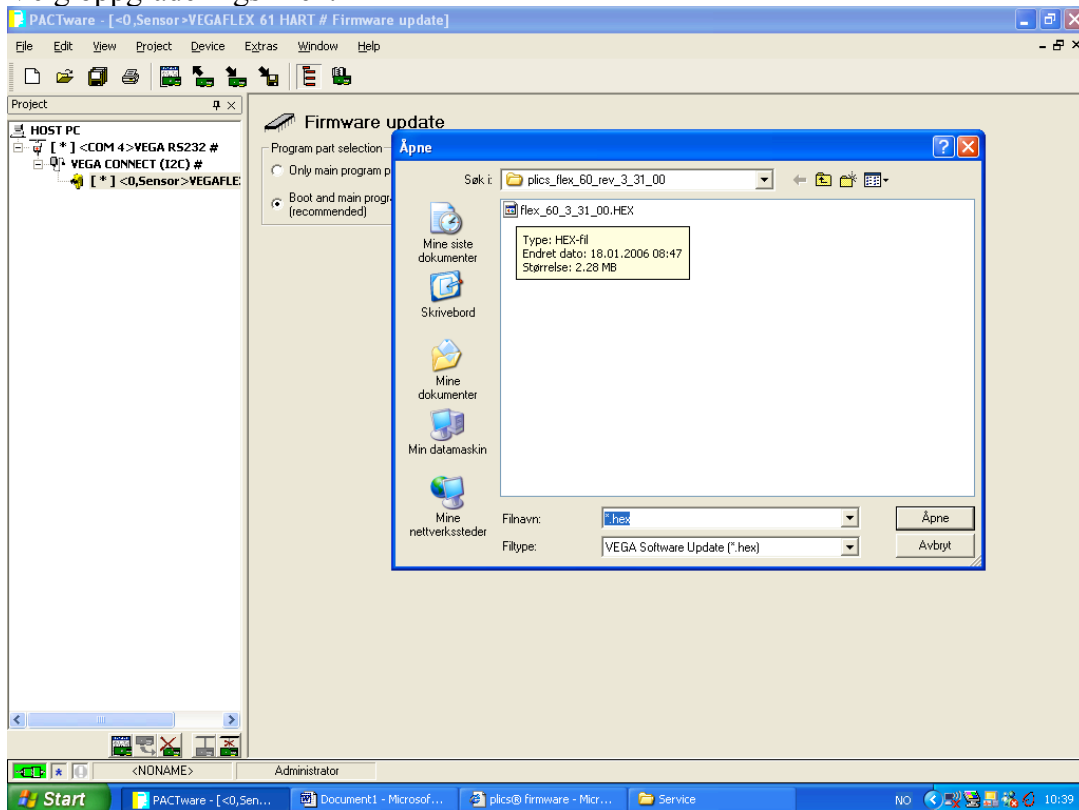

Og si "Yes" til update software.

Dette tar litt tid og gjør seg selv.

Du bør også ta en "system reset" etter oppdateringen er ferdig:

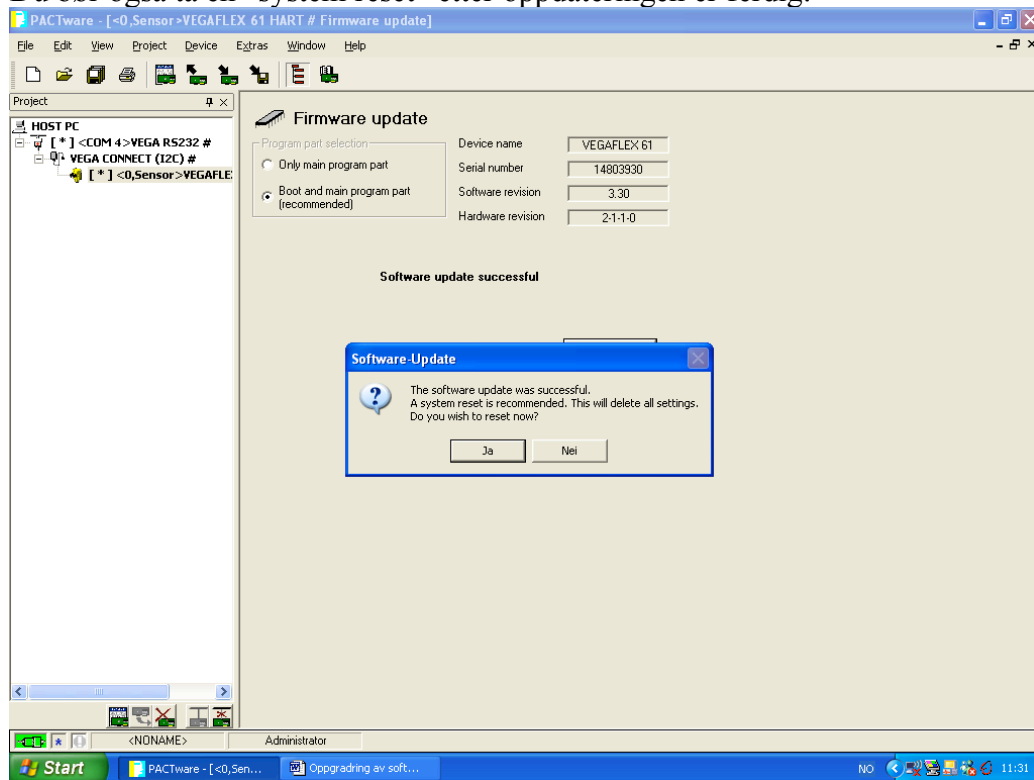

Firmware update

Program part selection:

Only main program part

Boot and main program part (recommended)

Device name	VEGAFLEX 61
Serial number	14803930
Software revision	3.30
Hardware revision	2-1-1-0

Software update successful

Software Update

The software update was successful.
A system reset is recommended. This will delete all settings.
Do you wish to reset now?

